



COTTON CANDY **OPERATING INSTRUCTIONS:**

1. Plug into a 15amp/120V designated electrical outlet. Place cotton candy machine in cotton candy cart, do not place on a table or floor.
2. **Loosen the 2 pins on the machine by turning counter clockwise or flip the 2 handles up and away from you.** This loosens the center spinner head. See diagram on the side of the cotton candy machine for further instruction
3. Center the bowl on 4 rubber nubs, over top spinner. Attach netting with metal clips. Sit plastic bubble cover on top of bowl.
4. Break up sugar chunks in the bucket, pour sugar into spinner head while machine is OFF, do NOT overfill. **NEVER REUSE SUGAR.** Dispose used sugar collected in the bowl.
5. Turn the heat and motor switches to ON. (both black switches on when making cotton candy) Do not adjust the dial, it remains between 2 & 3.
7. Use paper cones, twirl the cone in your hand clockwise, place cone a ¼” from bottom of bowl, work in a circular motion twirling the cone near outer edges to collect the webbed sugar as it sprays out the center spinner head.
8. If you drop the cone, turn both black switches OFF first before reaching in.
9. Turn OFF both black switches to refill the spinner head with sugar when low or when not in use. The dial remains between 2 & 3, do not adjust.
10. Turn off when done, unplug & let cool, scrape out excess sugar from bowl, do not cover center spinner head, remove bubble, tighten 2 machine pins/handles. Secure. Do not tip.

Need help?

Call Moonwalk Entertainment at 705-715-2925